# **RM 6193**

**8U 19" Rack Mount High brightness LCD Monitor User's Manual** 

# **Packing List**

The complete RM 6193 package consist of:

- Rack mount 19" TFT LCD display x 1
- 6' VGA cable (male to male) x 1
- Auto switch power adapter x 1
- User manual x 1
- AC Power cord x 1

Check to make sure that the unit was not damaged in shipping. If you encounter a problem, contact your dealer.

Please read this manual thoroughly, and follow the installation and operation procedures carefully to prevent any damage to the product, and/or any of the devices that connect to it.

#### Safety Instructions

- 1. Please read these safety instructions carefully.
- 2. Please keep this User's Manual for later reference.
- Please disconnect this equipment from AC outlet before cleaning. Don't use liquid or sprayed detergent for cleaning. Use moisture sheet or clothe for cleaning.
- 4. For pluggable equipment, the socked-outlet shall be installed near the equipment and shall be easily accessible.
- 5. Please keep this equipment from humidity.
- 6. Lay this equipment on a reliable surface when install. A drop or fall could cause injury.
- 7. Do not leave this equipment in an environment unconditioned, storage temperature above 60<sup>o</sup> C, it may damage the equipment.
- 8. The opening on the enclosure is for air convection hence the equipment from overheating. DO NOT COVER THE OPENING.
- 9. Make sure the voltage of the power source connect the equipment to the power outlet.
- 10. Please keep the power cord such a way that people can not step on it. Do not place anything over power cord. The power cord must rate for the voltage and current marked on the product's electrical ratings label. The voltage and current rating of the cord should be greater than the voltage and the current rating marked on the product.
- 11. All cautions and warning on the equipment should be noted.
- 12. If the equipment is not in use for long time, disconnect the equipment from mains to avoid being damaged by transient over-voltage.
- 13. Never pour any liquid into ventilation openings; this could cause fire or electrical shock.
- 14. Never open the equipment. For safety reason, qualified service personnel should only open the equipment.
- 15. If one of the following situations arises, get the equipment checked by service personnel.
  - The Power Cord or plug is damaged.
  - Liquid has penetrated into the equipment.
  - The equipment has been exposed to moisture.
  - The equipment has not worked well or you can not get it work according to User's Manual.
    The equipment has dropped and damaged.
  - If the equipment has obvious signs or breakage.


# **Index of Contents**

Pac	cking List	2			
Saf	fety Instructions	3			
Ind	Index of Contents				
1.	General Information	5			
	1.1 Overview	5			
	1.2 Product Specification	6			
2.	Rack Mount Installation	7			
3.	OSD Menu	8			
	3.1 OSD Menu Membrane Switch	8			
	3.2 On Screen Display Menu	9			
4.	Connecttion Diagram	11			
	4.1 Video Connection Diagram	11			
	4.2 Touch Screen Connection Diagram	12			
5.	Touch Screen Specification	13			
6.	DC Input power Supply (option)	14			
7.	Trouble shooting	15			

#### 1. General Information

#### 1.1 Overview

The RM6193 is a 8U rack mount LCD monitor with 19" 800-nit 1280 x 1024 TFT LCD monitor and rugged metal black color front bezel. This monitor comes with a standard 15-pin VGA video input and front access OSD membrane switch. Optional Video-input for S-video / BNC / RCA connector and USB or PS/2 type resistive-type touch. RM 6193 comes with an external 110/220VAC power adapter, 24/48 VDC power input is available for customer's application.

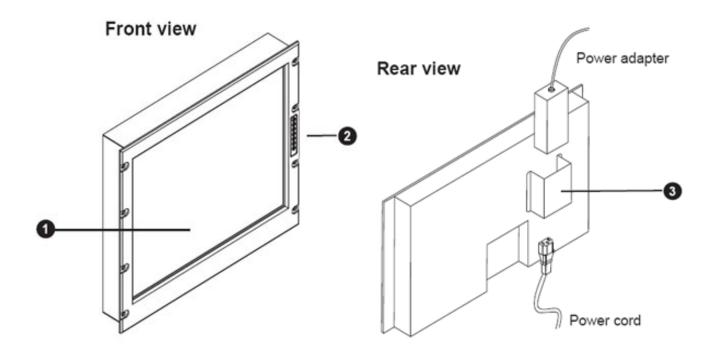


- 1. 19" 1280 x 1204 high brightness TFT LCD monitor
- 2. Membrane OSD Menu switch
- 3. External 110/220VAC power adapter with bracket

# 1.2 Product Specification

Model name	RM 6193		
Dimension	480 x 76 x 354.8mm/18.9 x 3" x 14inches		
Net Weight	8 Kg / 18 lbs		
Display Size	19 inches		
Panel Type	Active Matrix TFT LCD		
Resolution Capabilities	Maximum Resolution up to 1280 x 11024		
Viewing Angle (CR>10)	Right-Left view 160°(Typ) Up-Down View 160°(Typ)		
Contrast Ratio	700:1		
Brightness	White 800 cd/m² (Center 1 point Typ)		
Tr Response Time (ms)	1.3 ms		
Supported Colors	16.7M Colors (6-bit with FRC)		
Display Area (mm)	376 x 301		
VGA Signal Input	Analog RGB, 0.7Vp-p		
Sync. Type	Separate H/V, Composite, SOG		
Resolution	640 x 350, 70 Hz 720 x 400, 70 Hz 640 x 480, 60/ 72/ 75 Hz 800 x 600, 60/ 70/ 72/ 75 Hz 1024 x 768, 60/ 70/ 72/ 75 Hz 1152 x 864, 60/ 70/ 75 Hz 1280 x 1024, 60/ 70/ 75 Hz		
Cables	1 x 6' D-sub VGA male to male Cable		
Plug & Play DDC	EDID 1.3		
Power Source	Auto-sensing 100 to 240VAC, 50 / 60Hz		
Power	Max. 40 Watt, Standby 5 Watt		
Consumption			
Temperature	Operate 0 ~ 50°C / 32 ~ 122°F Storage -20 ~ 60°C / -4 ~ 140°F		
Humidity	10% ~ 90% RH		
Shock	10G acceleration (11ms duration)		
Vibration	5~500Hz 1G RMS random vibration		
Chassis	Heavy duty steel materials		
Construction			
Certification	CE / FCC, ROHs Compliance		

#### 2. Rack mount Installation

- 1. Find the property position and size to screw rack mount front bezel onto the server rack mount first.
- 2. Lift & push the rack mount monitor into the rack cabinet, and screw between bracket and rack mount monitor with screws.

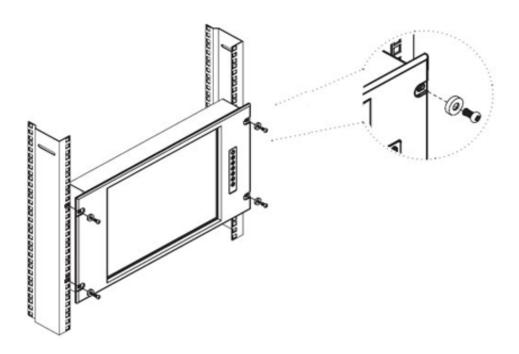

### 3. OSD Menu

# 3.1 OSD Menu Membrane Switch



Membrane Switch	Function	
0	Power light	
•	Green = On	
•	Orange = Power saving	
⊜	Power on / off LCD	
M E	Display the OSD menu	
$\diamondsuit \diamondsuit \diamondsuit \diamondsuit$	Scrolls through menu options and adjusts the displayed control	
_	Exit the OSD screen	
P	Shortcut key to auto adjustment by pressed the button for 5 seconds Of	
-	Toggle analog, digital & video connection (DVI-D and video options only)	

#### 3.2 On screen Display menu



#### **BRIGHTNESS / CONTRAST**

Brightness: Adjust background black level of the screen image.

Contrast: Adjust the difference between the image background (black level)

and the foreground (white level).

#### **AUTO ADJUST**

Auto Adjust: Fine tunes the video signal to eliminate waviness and distortion. A "Adjusting" message is displayed during the process.

Auto Tune: Optimize phase, clock, position and size. An "Adjusting" message is displayed during the process.

#### PHASE/CLOCK

Phase / Clock: To enter into the phase & clock sub menu

#### H/V POSITION

H/V Position: Align the screen image left or right and up or down.

#### **MISC**

Information: Display the current resolution, refresh rate and frequency information on the screen.

#### **OSD Timer**

Set the time duration in seconds that the OSD is visible after the last button is pressed. The factory default is 10 seconds.

### Color

Select the screen color - 5500K, 6500K & 9500K. The factory default is 9500K.

### Language

Select the language in which the OSD menu is displayed -

English, Chinese (中文), Japanese (日本語), German, French, Spanish, Italian

#### **RESET**


Restore the settings to factory defaults.

### 4. Connecton Diagram

The RM6193 comes with a standard 15-pin VGA video input and external 110/220VAC power adapter.

Optional Video-input for S-video / BNC / RCA connector and USB or PS/2 type resistive-type touch.

### 4.1 Video-input Connection Diagram

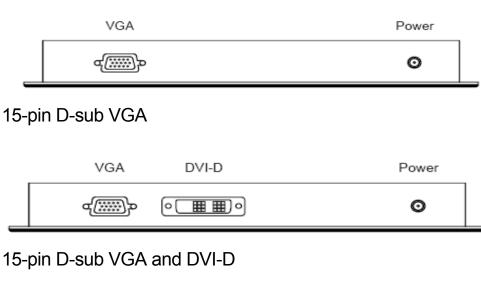



15-pin D-sub VGA, S-video and RCA



15-pin D-sub VGA, S-video and BNC

# **4.2 Touch Screen Connection Diagram**



# 15-pin D-sub VGA and USB-type touch screen



15-pin D-sub VGA and Serial-type touch screen

### 5. Touch Screen Specification


Touch screen type	Resistive-type
Interface	USB or PS/2
Optical	82%±5%
transmittance	
Surface hardness	≥3H (JIS K5400)
Operating system	Windows 98 / 2000 / ME / XP / NT / CE, DOS, Linux

Touch screen type	Capacitive-type	
Interface	USB or PS/2	
Optical transmittance	88%	
Surface hardness	Mohs' hardness rating: 6	
Operating system	Windows 98 / 2000 / ME / XP / NT / CE,	
	DOS, Linux	

#### **Remarks**

- USB touch screen package includes an extra 6ft USB cable, quick reference guideline and
  CD disc
- Serial touch screen package includes an extra 6ft serial cable, quick reference guideline and
  CD disc
- For detailed information, please refer to the attached CD disc
- As the touch screen unit is not made of toughened glass, please handle it carefully.

# 6. DC Input Power Supply (Option)



Model	24V	48V
Input rating		
Input voltage:	24-Volt	48-Volt
Input range:	18 ~ 36V	36 ~ 75V
Input current		
- No load	50mA	50 mA
- Full load	4880 mA	2442 mA
Output rating		
Output voltage:	12-Volt	12-Volt
Output current:	8.3A	8.3A
Efficiency	85%	86%

### 7. Trouble shooting

1. How do I adjust the resolution?

To change monitor resolution, click Start -> Control Panel -> Display. Select Setting tab to adjust the monitor resolution in Desktop Area. The available resolutions, "640 x 480", "800 x 600", "1024 x 768", "1152 x 864", "1280 x 1024", are deter- mined by the display card in your computer.

2. Is interference signal appeared on LCD normal when shutting down the computer ?

In rare cases, interference may appear on the monitor. This may be caused by signal rate of VGA card and is considered normal. The image quality can be improved by adjusting the phase or pixel rate automatically or manually.

- 3. The membrane button power light is not ON Press the power On / Off on LCD membrane button to check if the monitor is in the ON mode. Check the power cord is properly connected to the LCD keyboard drawer and power outlet.
- 4. Screen image is not centered or sized properly

Press the button for two seconds to automatically adjust the image. Adjust the H-position and V-position settings via On-screen menu.